



FIREPLACE AND GAS LOG LIGHTING INSTRUCTIONS

This information is used to be a guideline to help customers who are willing to light their own gas logs. Berico, its officers, agents, and employees, shall not be liable in any manner for any loss, injury, or damage to person or property caused by, or arising out of the acts or omissions of, Owner, Owner's agents, subcontractors, invitees, and guests, arising out of the use of this information. This is only to be used as a guideline and may not apply to all types of logs.

Instructional Video: <https://www.youtube.com/watch?v=y8WgLAMeAEc>

MANUAL CONTROL LIGHTING INSTRUCTIONS

1. STOP! Read the safety information.
2. Make sure the manual shutoff valve is fully open.
3. This heater is equipped with an ignition device (piezo) which automatically lights the pilot.
4. Push in gas control knob slightly and turn control knob clockwise to the OFF position.
Note: Knob cannot be turned to OFF unless knob is pushed in slightly. Do not force.
5. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas STOP! Follow the instructions in your manual under What To Do if You Smell Gas. If you do not smell gas, go to the next step.
6. From OFF position, push in gas control knob slightly and turn counterclockwise to the IGN position. See Figure 45. Push in and hold control knob for 5 seconds.
NOTE: If you are running the heater for the first time, it will be necessary to press in the control knob for 30 seconds to allow air to bleed out of the gas piping.
7. With the control knob pushed in, push and release the piezo ignitor button to light the ODS pilot. The pilot is located on the left side of the heater, behind the middle log and on the back of the rear burner. If piezo ignitor does not light the pilot, refer to your manual for Match Lighting Instructions.
8. Hold the control knob in for an additional 10 seconds to prevent the ODS pilot from shutting off the gas while the thermocouple is warming up.
9. Release the control knob.
 - If the knob does not pop out when released, stop and immediately call your service technician or gas supplier.
 - If the ODS pilot will not stay lit after several tries, push and turn the gas control knob clockwise to OFF and wait 15 seconds. Repeat steps 6 through 9.
10. Push in control knob and turn counterclockwise to the HIGH setting. At this location the control knob will pop out when positioned correctly. The knob can now be positioned at any position between HIGH and LOW. Refer to Figures 46 and 47.

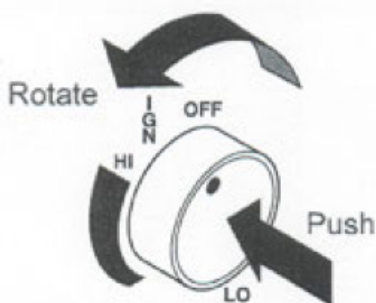


Figure 45 - IGN Position

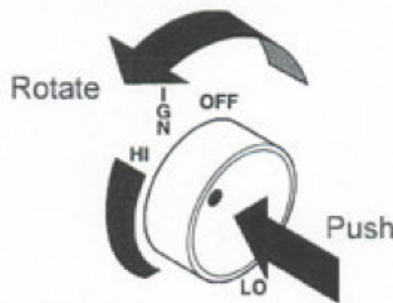


Figure 46 - HIGH Position

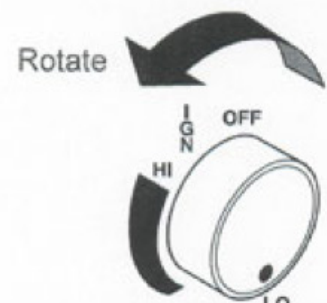


Figure 47 - LOW Position

WARNING: Wait 30 seconds before readjusting the heater when the control knob has been turned down to a lower setting.



MILLI-VOLT CONTROL LIGHTING INSTRUCTIONS

1. STOP! Read the safety information label.
2. Make sure the manual shutoff valve is fully open.
3. This gas log set is equipped with an ignition device (piezo) which automatically lights the pilot. If piezo ignitor does not light the pilot, refer to your manual for Match Lighting Instructions.
4. Turn gas control knob clockwise to the OFF position and turn ON/OFF switch to OFF position.
5. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow the instructions in your manual under What To Do if You Smell Gas.
6. From the OFF position, turn gas control knob counterclockwise to IGN position. Push in control knob for 5 seconds
NOTE: *If you are running the heater for the first time, it may be necessary to press in the control knob for 30 seconds or longer to allow air to bleed out of the gas piping.*
7. With control knob pushed in, push in and release the piezo ignitor button to light the pilot.
8. Continue pushing the control knob in for a further 10 seconds to prevent the flame detector from shutting off the gas while the probe is warming up. Release the control knob.
9. Turn gas control knob counterclockwise to the ON position.
10. After the pilot has been lit for one minute, the burners can be turned on. Turn the ON/OFF switch to ON position or adjust thermostat to desired setting. **NOTE:** *to use the thermostat function (if installed) the control knob must be set to "ON" and ON/OFF switch must be in the "OFF" position.*
11. If the gas logs will not operate, follow the instructions To Turn Off Gas To Heater below and call your service technician or gas supplier.

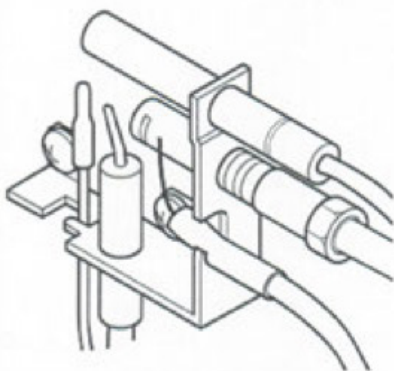


Figure 48 - Pilot

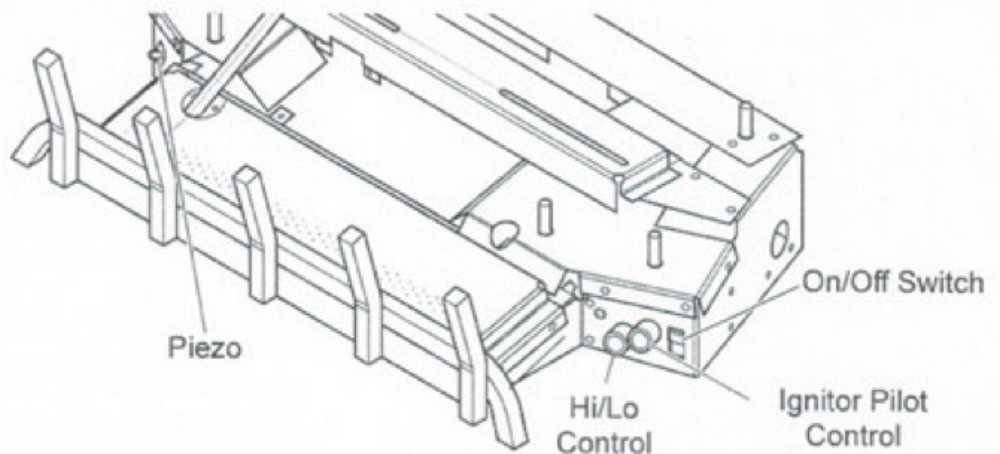


Figure 49 - Control Cover Plate for Milli-Volt

TO TURN OFF GAS TO HEATER

1. Turn control knob clockwise to OFF position to completely shut off the heater.
2. If applicable: Turn ON/OFF switch to OFF position and/or set thermostat (if present) to lowest setting.
3. If applicable: Turn off all electric power to the heater.